

# SUPERSEDE DUAL TIME


## USER MANUAL



**HORAGE**

Dear Customer,  
Congratulations on your new HORAGE Supersede Dual Time,  
we hope it brings you much joy in the years to come.

Please be sure to review the “Important Information” and “Operation Instructions”  
listed below prior to using your Supersede Dual Time.

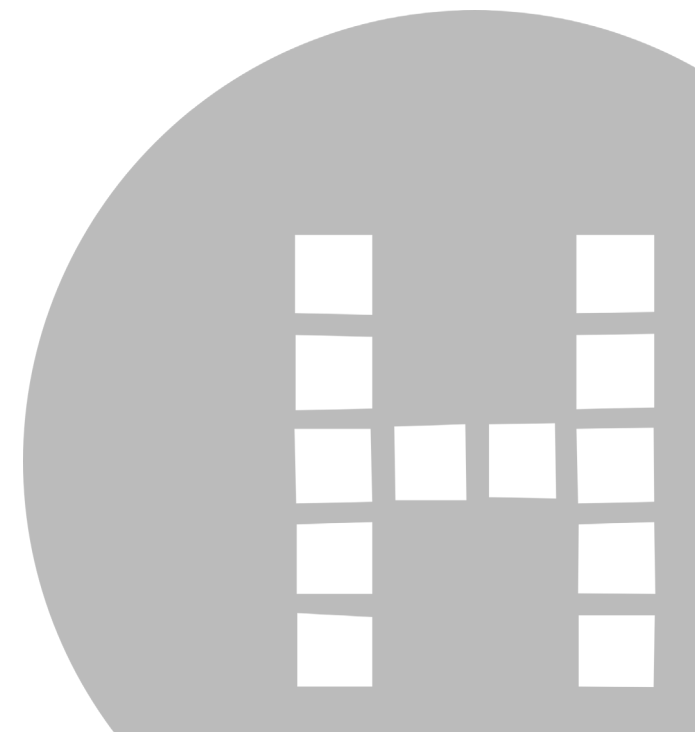

## IMPORTANT INFORMATION

**Attention:** To guarantee the reliability of your HORAGE watch, we have created a short list of recommendations for you.

Your Supersede Dual Time has a K2 automatic Micro-Rotor movement. This means it will rewind the mainspring whilst being worn on the wrist, or when in a watch winder. If the watch has not been worn for a period and is not running, the first step you should take is to wind the movement by turning the crown approximately 30 times in a clockwise direction.

- The energy from winding the watch is stored in the main spring located in the main barrel, and this reserve of energy is referred to as the power reserve.
- The Supersede Dual Time has a power reserve of over 3 days or 72 hours. A fully wound watch may run slightly longer than 3 days if not worn, however, the amplitude or consistency of the energy will reduce after 3 days and therefore the precision of the watch could be impacted.



## USEFUL INFORMATION

- The accuracy of the Supersede Dual Time is calculated within a 3-day operating timeframe and therefore to ensure your watch remains precise please be sure to wear or manually wind the watch on or before the 3rd day prior to it last being worn or wound.
- Although the K2 movement utilises a silicon escapement that performs well in everyday magnetic fields. Very strong magnetic forces can negatively impact any mechanical watch's performance.
- We recommend that you keep your Supersede Dual Time away from magnets, batteries, or devices that emit strong magnetic fields.
- The Supersede Dual Time is very reliable; however, as a precision mechanical watch with many moving parts, impacts such as dropping the watch should be avoided.
- To ensure your watch remains water-resistant to the maximum water pressure designated on the watch case, always return the watch crown to the fully pushed-in and screwed down position.
- Water resistance can be affected over time by impact shocks, and chemical reactions with substances such as gasoline, adhesives, paints, cleaning sprays, etc.




## USEFUL INFORMATION

- Excessive, continued turning of the crown can reduce the longevity of seals used for water resistance. If you frequently take your watch in the water, it is recommended to have its water resistance checked by a competent watch service centre every three years.
- From time to time, you may feel a desire to clean your watch. Before doing so, you can remove the strap as outlined in the operating instructions to ensure you are able to access all areas.
- Ideally, use a small plastic or rubber bowl and fill it with warm water and some gentle hand washing soap. Before placing the watch case in the warm water, be sure to check that the crown is in the pushed-in and screwed down in the closed position.
- Using a soft cotton cloth, you can gently clean the case. Once finished, rinse the case with fresh water and pat dry with a dry, soft cotton towel. Afterwards, buff with a microfibre hand towel.



## OVERVIEW

- 1 Hour Hand
- 2 Minute Hand
- 3 Centre Seconds Hand
- 4 Date Window
- 5 24 hr Second Time Zone Disc
- 6 Screw Down Adjustment Crown

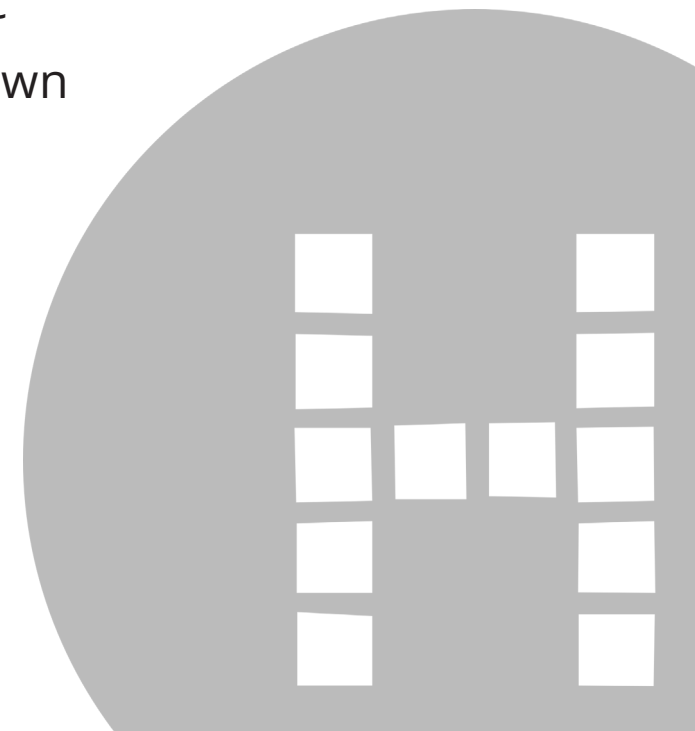

# SUPERSEDE DUAL TIME

K2 MICRO ROTOR

---





### Position 0: Crown in Pushed Home Position

- **0** • With the crown completely against the case and screwed down a properly maintained watch will be water resistant to the depth noted on the case back when the crown is in this position and fully screwed down.







## Position 1: Winding Position

- **1** • In this position, you can wind the watch manually by turning the crown clockwise.
- Continuously turn the crown 30 or more full rotations to ensure adequate power reserve.
- You cannot overwind the watch. The watch will also wind itself with each movement on your wrist when worn.





### Position 3: Setting The Home (or Reference) Time

- **3** • With the crown unscrewed and pulled outwards to the second notch also referred to as the third position turn the crown clockwise to set the Hour and Minute Hands correctly. The Centre Seconds Hand will stop running when the crown is pulled to position 3. This is also known as 'hacking'
- When finished with time setting be sure to push in the crown to position 0 with crown fully screwed down to ensure water resistance.





## Position 2: Quick Set Date & Second Time

- **2** • With the crown unscrewed pull the crown outwards to the first notch also referred to as the seconds position, set the **Date** by turning the crown counterclockwise (anticlockwise). The date will quickly jump through the days.
- Set the **Second Time** (shown on the time disc at 9 o'clock) by turning the crown clockwise.
- The **Time Disc** will jump forwards in time in one-hour increments.
- Take note that the **Date** is linked to the **Main Hour Hand** not the Time Disc.
- Once set be sure to push in and screw down the crown to ensure water resistance.



# SUPERSEDE DUAL TIME

K2 MICRO ROTOR

---



**HORAGE SA Factory 1**  
**Solothurnstrasse 1, 2504 Biel, Switzerland**  
**[www.horage.com](http://www.horage.com)**

**HORAGE**